

WIRING DIAGRAM

Packaged Ultra Low NOx Single Stage Gas Heat/Electric Air Conditioner

230 Volt

Single Phase

60Hz

NOTES:

1. Disconnect all power before servicing.
2. For supply connection use copper conductors only.
3. Not suitable on systems that exceed 150V to ground.
4. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C.
5. for supply wire ampacities and overcurrent protection, see unit rating plate.

1. Couper le courant abantaire letretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150V a la terre.

