


REPLACEMENT PARTS LIST

WALL MOUNT AIR HANDLER B6BW SERIES



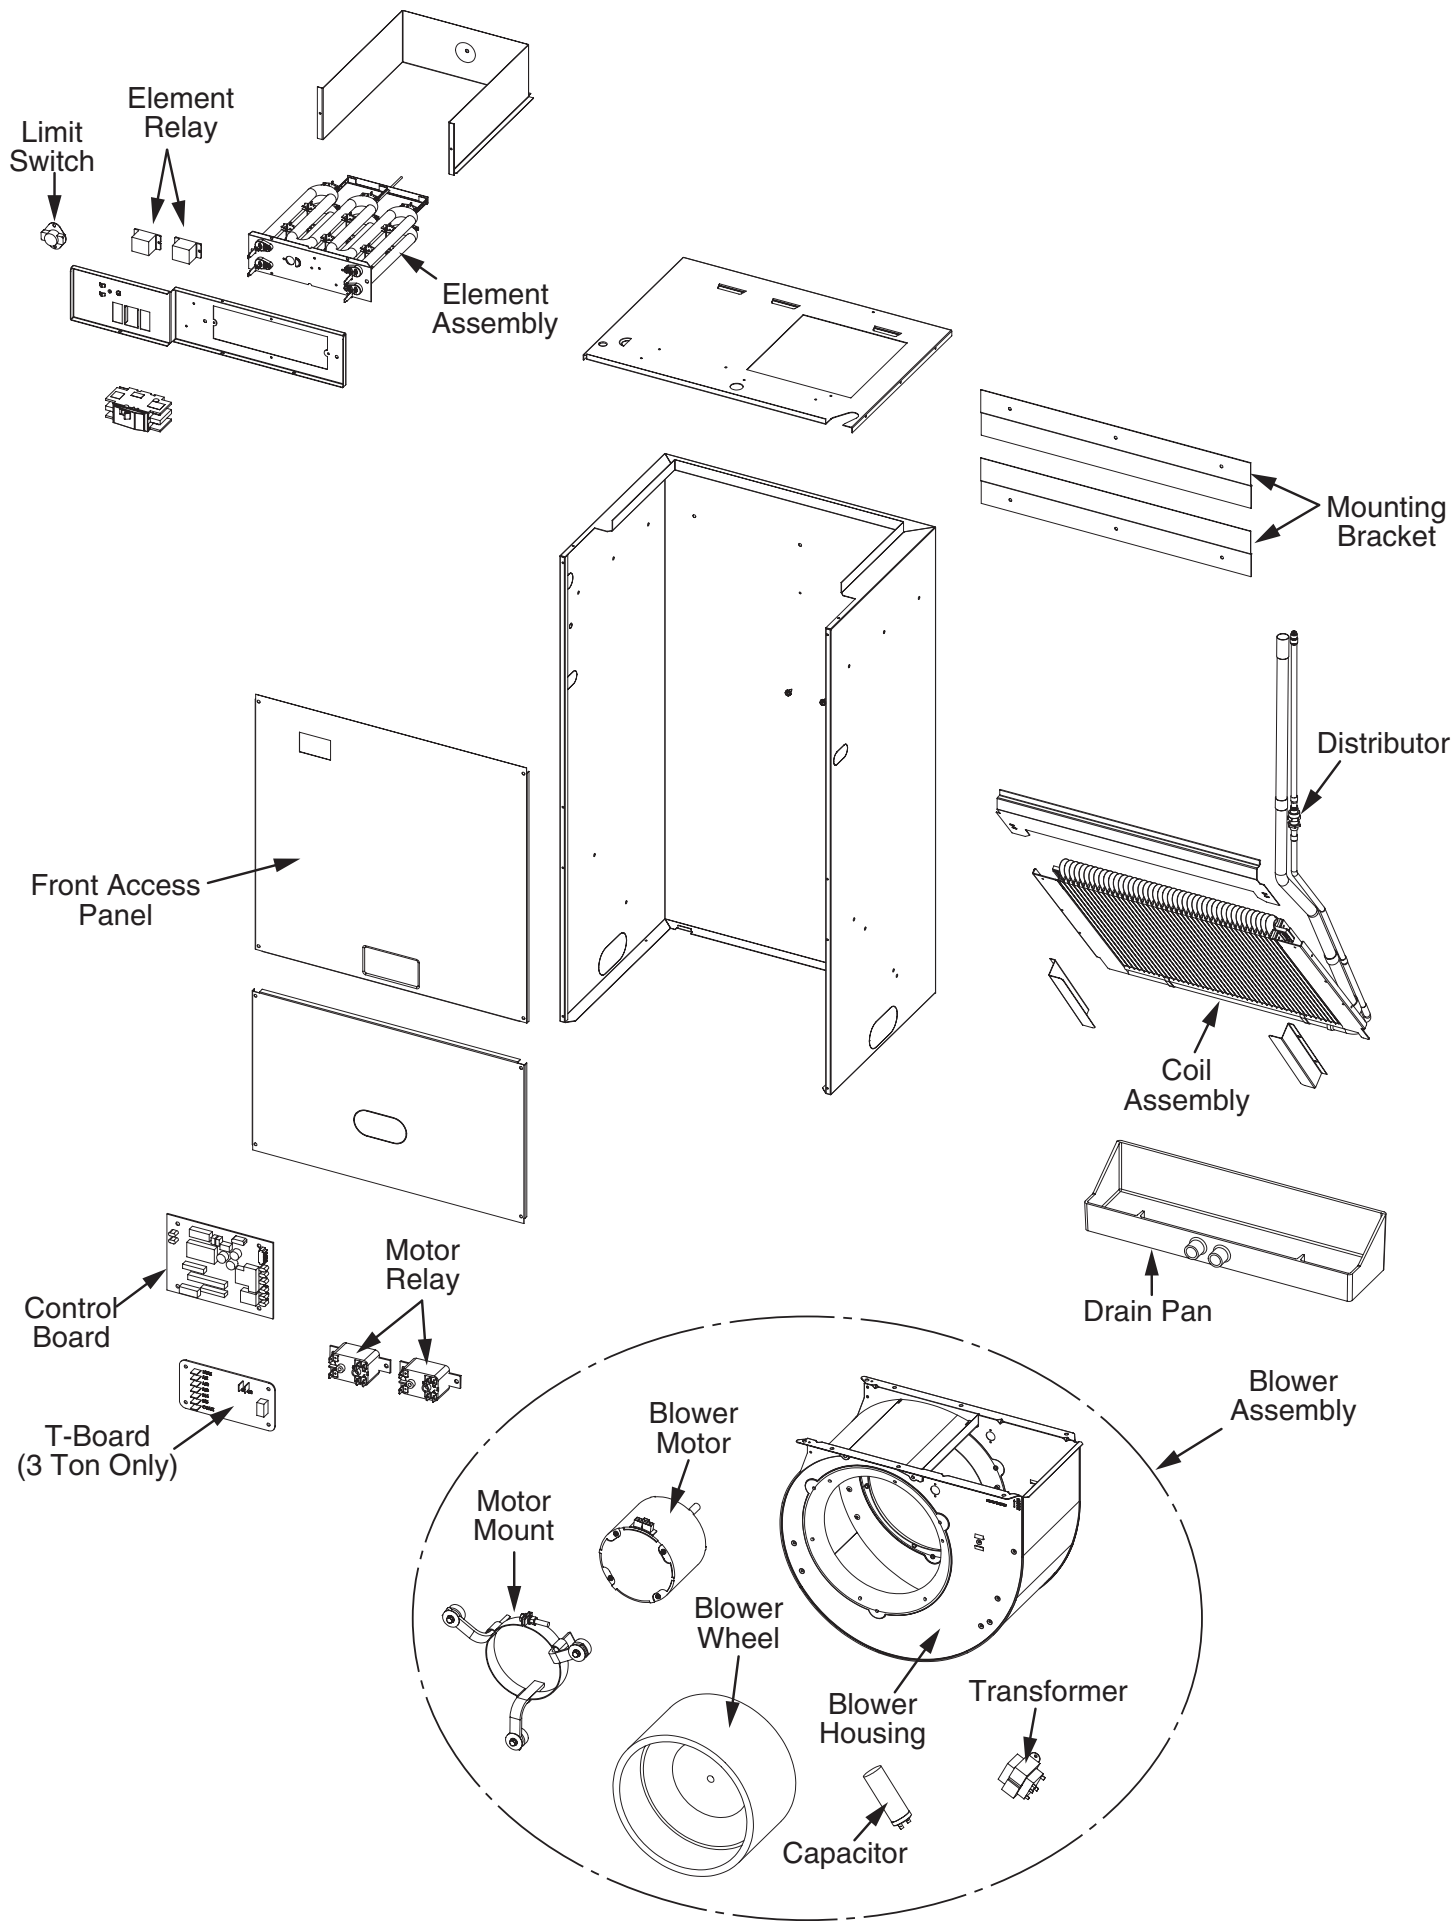

B6BW WALL MOUNT AIR HANDLER

DESCRIPTION	018K-05	018K-08	019K-05	019K-08	024K-05	024K-08	024K-10
Blower Assembly	921098	921098	921100	921100	921099	921099	921099
Blower Housing	297210R	297210R	297210R	297210R	297210R	297210R	297210R
Blower Motor	622497R	622497R	622497R	622497R	622450R	622450R	622450R
Blower Motor (Units With T-Board)	—	—	—	—	—	—	—
Blower Wheel	667251R	667251R	667251R	667251R	667251R	667251R	667251R
Capacitor	01-0024	01-0024	01-0024	01-0024	01-0024	01-0024	01-0024
Close Off Panel (Not Shown)	—	—	294261	294261	—	—	—
Coil Assembly	921102	921102	921104	921104	921103	921103	921103
Control Board	1016380R	1016380R	1016380R	1016380R	1016380R	1016380R	1016380R
Decorator Panel - Optional (Not Shown)	903892	903892	919583	919583	903892	903892	903892
Distributor	664516R	664516R	1014894R	1014894R	664518R	664518R	664518R
Drain Pan	669360R	669360R	669360R	669360R	669360R	669360R	669360R
Element Assembly	1007315R	1007316R	1007315R	1007316R	1007315R	1007316R	1007317R
Element Relay - Dc (Black)	1017207	1017207	1017207	1017207	1017207	1017207	1017207
Element Relay - Ac (White)	1017206	1017206	1017206	1017206	1017206	1017206	1017206
Fuse - 3 Amp (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R	632261R
Limit Switch	626408R	626407R	626408R	626407R	626408R	626407R	626407R
Motor Mount	913871	913871	913871	913871	913871	913871	913871
Motor Relay	—	—	—	—	—	—	—
Mounting Bracket	176351	176351	176351	176351	176351	176351	176351
Transformer	621709R	621709R	621709R	621709R	621709R	621709R	621709R
Set Of Wires (Not Shown)	M0057202R	M0057203R	M0057202R	M0057203R	M0057202R	M0057203R	M0057203R
T-Board	—	—	—	—	—	—	—

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

B6BW WALL MOUNT AIR HANDLER

DESCRIPTION	030K-05	030K-08	030K-10	036K-05	036K-08	036K-10
Blower Assembly	921100	921100	921100	921101	921101	921101
Blower Housing	297210R	297210R	297210R	—	—	—
Blower Motor	622451R	622451R	622451R	622690R	622690R	622690R
Blower Motor (Units With T-Board)	—	—	—	1021518	1021518	1021518
Blower Wheel	667251R	667251R	667251R	667037R	667037R	667037R
Capacitor	01-0024	01-0024	01-0024	—	—	—
Close Off Panel (Not Shown)	294261	294261	294261	—	—	—
Coil Assembly	921104	921104	921104	921105	921105	921105
Control Board (*Produced Before 9/17/2014)	1016380R	1016380R	1016380R	624735R*	624735R*	624735R*
Control Board (*Produced After 9/16/2014)	1016380R	1016380R	1016380R	624784R*	624784R*	624784R*
Decorator Panel - Optional(Not Shown)	919583	919583	919583	919583	919583	919583
Distributor	664517R	664517R	664517R	664519	664519	664519
Drain Pan	669360R	669360R	669360R	669360R	669360R	669360R
Element Assembly	1007315R	1007316R	1007317R	1007315R	1007316R	1007317R
Element Relay - Dc (Black)	1017207	1017207	1017207	1017207	1017207	1017207
Element Relay - Ac (White)	1017206	1017206	1017206	1017206	1017206	1017206
Fuse - 3 Amp (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
Limit Switch	626408R	626407R	626407R	626408R	626407R	626407R
Motor Mount	913871	913871	913871	913871	913871	913871
Motor Relay	—	—	—	624720R	624720R	624720R
Mounting Bracket	176351	176351	176351	176351	176351	176351
Transformer	621709R	621709R	621709R	621709R	621709R	621709R
Set Of Wires (Not Shown)	M0057202R	M0057203R	M0057203R	M0057204R	M0057205R	M0057205R
T-Board	—	—	—	624719R	624719R	624719R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

