


REPLACEMENT PARTS LIST

WALL MOUNT AIR HANDLER

B6BW SERIES

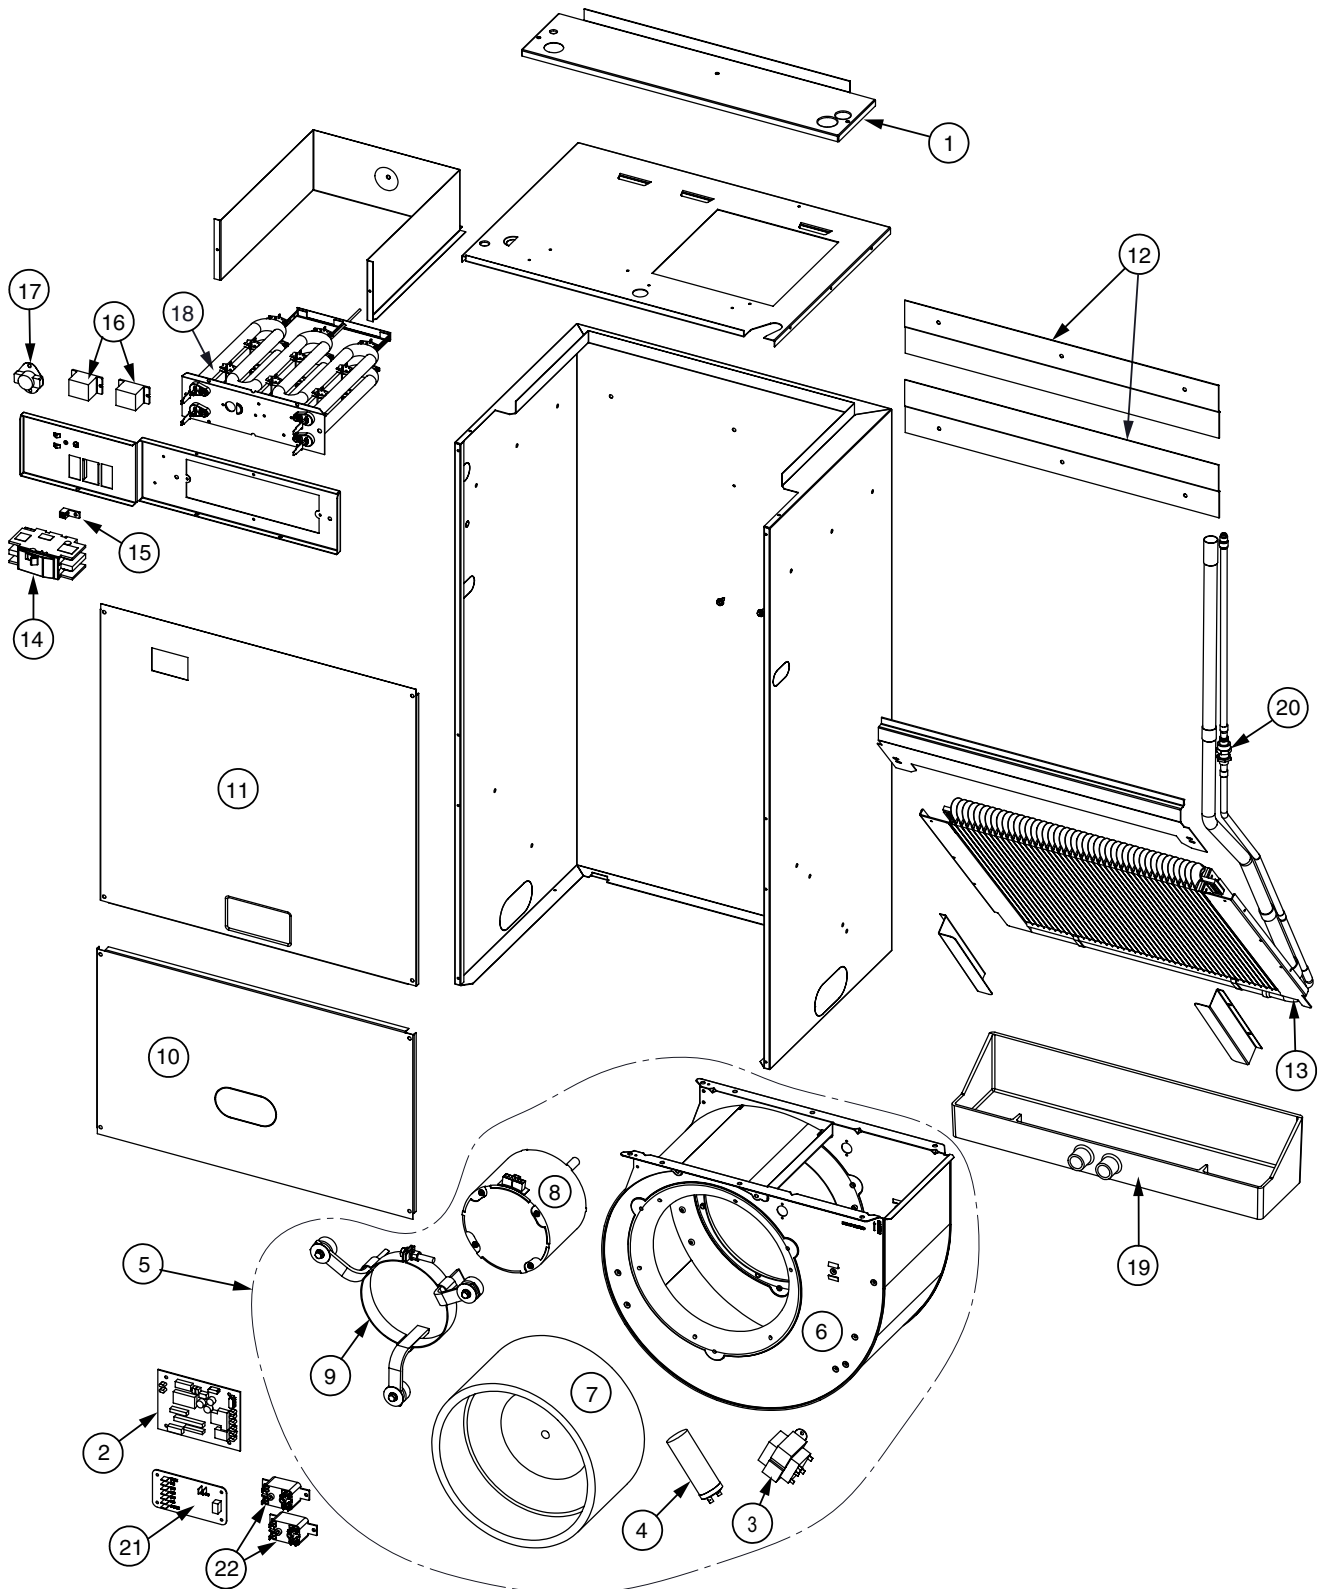

B6BW WALL MOUNT AIR HANDLER

ITEM	DESCRIPTION	018K-05	018K-08	024K-05	024K-08	024K-10
1	TOP PANEL	D12311R	D12311R	D12311R	D12311R	D12311R
2	PCB CONTROL	624735	624735	624735	624735	624735
3	TRANSFORMER	621709	621709	621709	621709	621709
4	CAPACITOR	622133	622133	622133	622133	622133
5	BLOWER ASSY	921098	921098	921099	921099	921099
6	BLOWER HOUSING	297210	297210	297210	297210	297210
7	BLOWER WHEEL	667251	667251	667251	667251	667251
8	MOTOR, BLOWER	622497	622497	622450	622450	622450
9	MOTOR MOUNT	913871	913871	913871	913871	913871
10	PANEL, FRONT/BOTTOM	392301R	392301R	392301R	392301R	392301R
11	FRONT ACCESS PANEL	D12301R	D12301R	D12301R	D12301R	D12301R
12	MOUNTING BRACKET	176351	176351	176351	176351	176351
13	COIL ASSY	921102	921102	921103	921103	921103
14	CIRCUIT BREAKER	632249	632249	632249	632249	632249
15	GROUNDING LUG	631431	631431	631431	631431	631431
16	RELAY, ELEMENT DC (BLACK)	622210	622210	622210	622210	622210
	RELAY, ELEMENT AC (WHITE)	624843	624843	624843	624843	624843
17	LIMIT SWITCH	626408	626407	626408	626407	626407
18	REPL ELEMENT ASSY	1007315R	1007316R	1007315R	1007316R	1007317R
19	DRAIN PAN	669360	669360	669360	669360	669360
20	DISTRIBUTOR	664516	664516	664518	664518	664518
21	T-BOARD	—	—	—	—	—
22	RELAY, MOTOR	—	—	—	—	—
23	FILTER (NOT SHOWN)	668934	668934	668934	668934	668934
24	SET OF WIRES (NOT SHOWN)	M0057202R	M0057203R	M0057202R	M0057203R	M0057203R
25	CLOSE OFF PANEL (NOT SHOWN)	—	—	—	—	—
26	FUSE, 5 AMP (NOT SHOWN)	632269	632269	632269	632269	632269
27	RESTRICTOR (NOT SHOWN)	664056	664056	664057	664057	664057
28	DECORATOR PANEL, OPTIONAL (NOT SHOWN)	903892	903892	903892	903892	903892

ITEM	DESCRIPTION	030K-05	030K-08	030K-10	036K-05	036K-08	036K-10
1	TOP PANEL	D12311R	D12311R	D12311R	D12311R	D12311R	D12311R
2	PCB CONTROL	624735	624735	624735	624784	624784	624784
3	TRANSFORMER	621709	621709	621709	621709	621709	621709
4	CAPACITOR	622133	622133	622133	—	—	—
5	BLOWER ASSY	921100	921100	921100	921101	921101	921101
6	BLOWER HOUSING	297210	297210	297210	297212	297212	297212
7	BLOWER WHEEL	667251	667251	667251	667037	667037	667037
8	MOTOR, BLOWER	622451	622451	622451	622514	622514	622514
9	MOTOR MOUNT	913871	913871	913871	913871	913871	913871
10	PANEL, FRONT/BOTTOM	392301R	392301R	392301R	2B5671R	2B5671R	2B5671R
11	FRONT ACCESS PANEL	D12301R	D12301R	D12301R	D12301R	D12301R	D12301R
12	MOUNTING BRACKET	176351	176351	176351	176351	176351	176351
13	COIL ASSY	921104	921104	921104	921105	921105	921105
14	CIRCUIT BREAKER	632249	632249	632249	632249	632249	632249
15	GROUNDING LUG	631431	631431	631431	631431	631431	631431
16	RELAY, ELEMENT DC (BLACK)	622210	622210	622210	622210	622210	622210
	RELAY, ELEMENT AC (WHITE)	624843	624843	624843	624843	624843	624843
17	LIMIT SWITCH	626408	626407	626407	626408	626407	626407
18	REPL ELEMENT ASSY	1007315R	1007316R	1007317R	1007315R	1007316R	1007317R
19	DRAIN PAN	669360	669360	669360	669360	669360	669360
20	DISTRIBUTOR	664517	664517	664517	664519	664519	664519
21	T-BOARD	—	—	—	624719	624719	624719
22	RELAY, MOTOR	—	—	—	624720	624720	624720
23	FILTER (NOT SHOWN)	668651	668651	668651	669897	669897	669897
24	SET OF WIRES (NOT SHOWN)	M0057202R	M0057203R	M0057203R	M0057204R	M0057205R	M0057205R
25	CLOSE OFF PANEL (NOT SHOWN)	294261	294261	294261	—	—	—
26	FUSE, 5 AMP (NOT SHOWN)	632269	632269	632269	632269	632269	632269
27	RESTRICTOR (NOT SHOWN)	664060	664060	664060	664069	664069	664069
28	DECORATOR PANEL, OPTIONAL (NOT SHOWN)	919583	919583	919583	919583	919583	919583

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

