


REPLACEMENT PARTS LIST

Wall Mount Air Handler B6EW Series

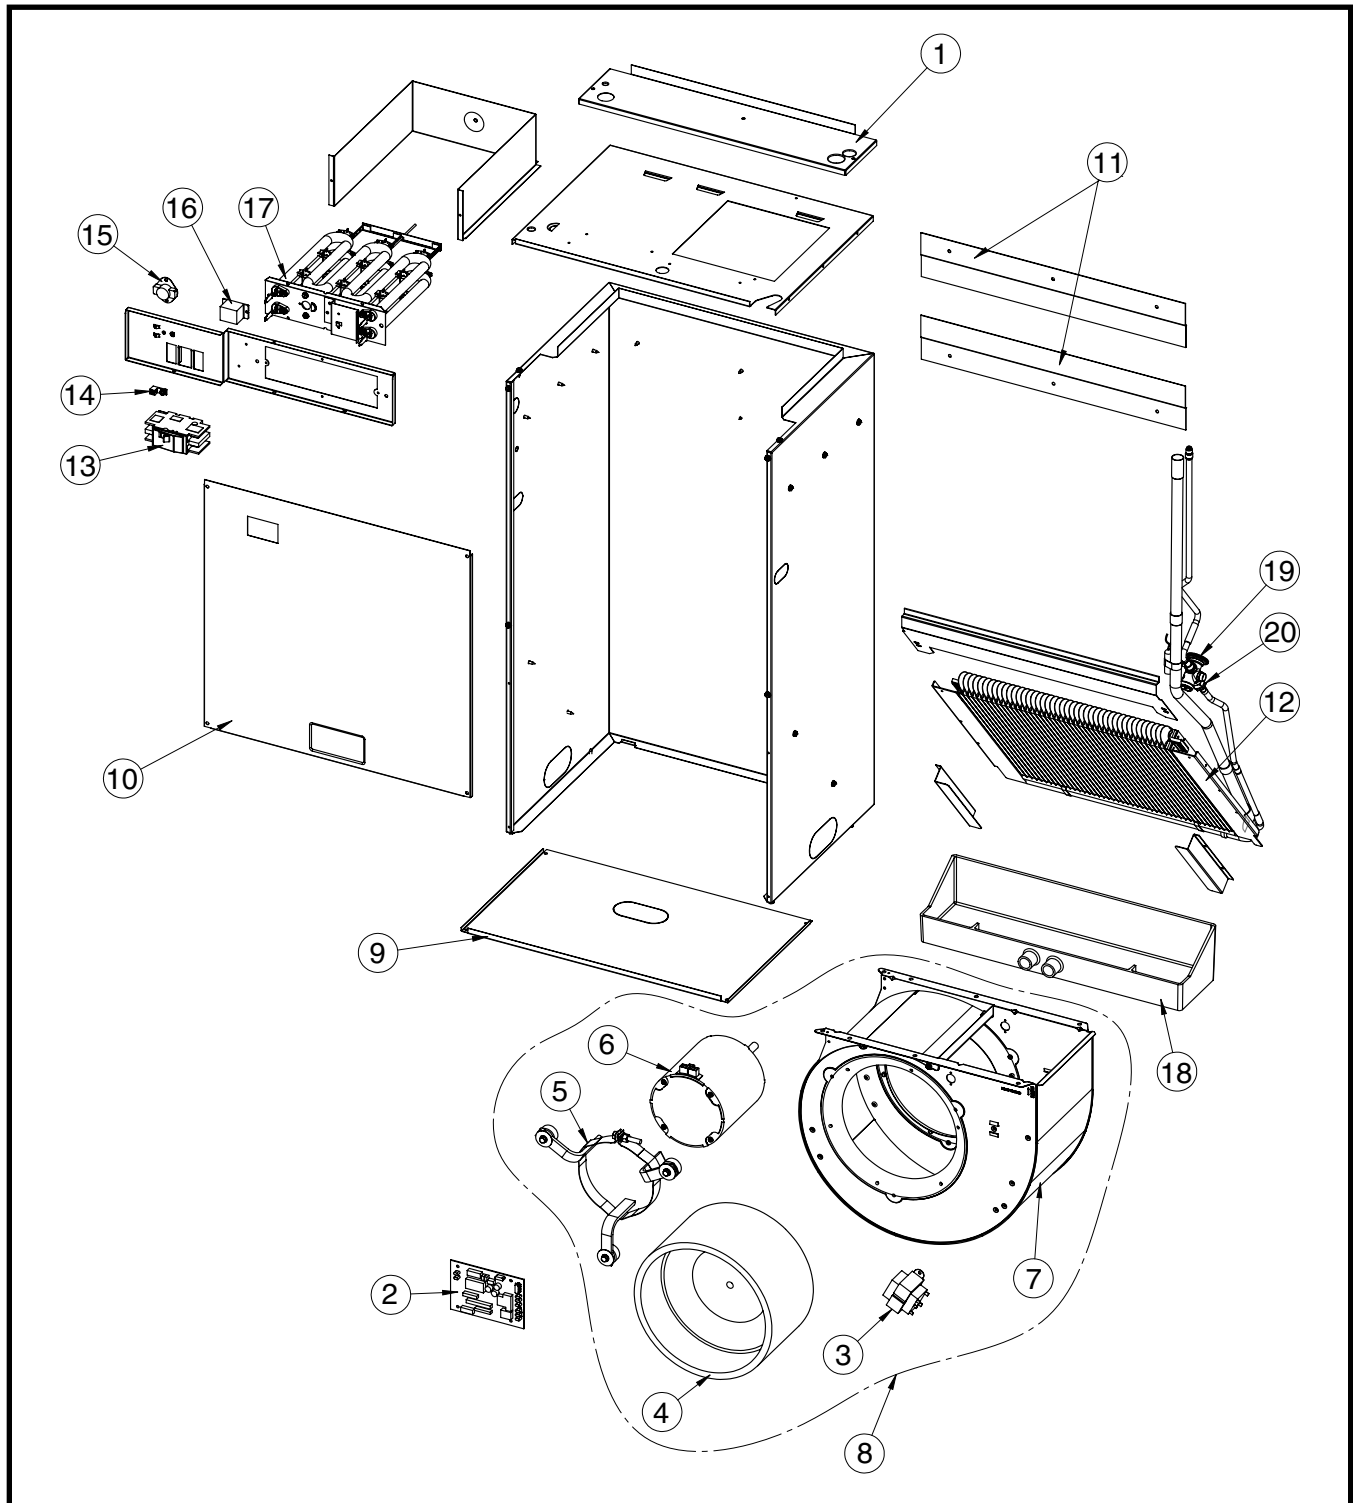

B6EW Series Wall Mount Air Handler

ITEM	DESCRIPTION	X18K/X24K-05	X18K/X24-08	X24K-10	X25K-05	X25K-08	X25K-10
1	TOP PANEL	D12311R	D12311R	D12311R	D12311R	D12311R	D12311R
2	PCB CONTROL	624784	624784	624784	624784	624784	624784
3	TRANSFORMER	621709	621709	621709	621709	621709	621709
4	BLOWER WHEEL	667251	667251	667251	667251	667251	667251
5	MOTOR MOUNT	913871	913871	913871	913871	913871	913871
6	MOTOR BLOWER	622544	622544	622544	622544	622544	622544
7	BLOWER HOUSING	297210	297210	297210	297210	297210	297210
8	BLOWER ASSY	921455	921455	921455	921455	921455	921455
9	PANEL, FRONT/BOTTOM	392301R	392301R	392301R	392301R	392301R	392301R
10	FRONT ACCESS PANEL	D12301R	D12301R	D12301R	D12301R	D12301R	D12301R
11	MOUNTING BRACKET	176351	176351	176351	176351	176351	176351
12	COIL ASSY	921457	921457	921457	921648	921648	921648
13	CIRCUIT BREAKER	632249	632249	632249	632249	632249	632249
14	GROUNDING LUG	631431	631431	631431	631431	631431	631431
15	LIMIT SWITCH	626408	626407	626407	626408	626407	626407
16	RELAY, ELEMENT	622210	622210	622210	622210	622210	622210
17	REPL ELEMENT ASSY	270871R	270872R	270873R	270871R	270872R	270873R
18	DRAIN PAN	669360	669360	669360	669360	669360	669360
19	TXV	669564	669564	669564	669564	669564	669564
20	DISTRIBUTOR	664588	664588	664588	664588	664588	664588
21	FILTER (NOT SHOWN)	668934	668934	668934	668651	668651	668651
22	SET OF WIRES (NOT SHOWN)	M0072201R	M0072202R	M0072202R	M0072201R	M0072202R	M0072202R
23	CLOSE OFF PANEL (NOT SHOWN)	—	—	—	294261	294261	294261
24	FUSE, 5 AMP (NOT SHOWN)	632269	632269	632269	632269	632269	632269
25	DECORATOR PANEL, OPTIONAL (NOT SHOWN)	903892	903892	903892	919583	919583	919583

ITEM	DESCRIPTION	X30K-05	X30K-08	X30K-10	X36K-05	X36K-08	X36K-10
1	TOP PANEL	D12311R	D12311R	D12311R	D12311R	D12311R	D12311R
2	PCB CONTROL	624784	624784	624784	624784	624784	624784
3	TRANSFORMER	621709	621709	621709	621709	621709	621709
4	BLOWER WHEEL	667251	667251	667251	667037	667037	667037
5	MOTOR MOUNT	913871	913871	913871	913871	913871	913871
6	MOTOR BLOWER	622544	622544	622544	622544	622544	622544
7	BLOWER HOUSING	297210	297210	297210	297212	297212	297212
8	BLOWER ASSY	921455	921455	921455	921456	921456	921456
9	PANEL, FRONT/BOTTOM	392301R	392301R	392301R	2B5671R	2B5671R	2B5671R
10	FRONT ACCESS PANEL	D12301R	D12301R	D12301R	D12301R	D12301R	D12301R
11	MOUNTING BRACKET	176351	176351	176351	176351	176351	176351
12	COIL ASSY	921458	921458	921458	921459	921459	921459
13	CIRCUIT BREAKER	632249	632249	632249	632249	632249	632249
14	GROUNDING LUG	631431	631431	631431	631431	631431	631431
15	LIMIT SWITCH	626408	626407	626407	626408	626407	626407
16	RELAY, ELEMENT	622210	622210	622210	622210	622210	622210
17	REPL ELEMENT ASSY	270871R	270872R	270873R	270871R	270872R	270873R
18	DRAIN PAN	669360	669360	669360	669360	669360	669360
19	TXV	669565	669565	669565	669566	669566	669566
20	DISTRIBUTOR	664588	664588	664588	664588	664588	664588
21	FILTER (NOT SHOWN)	668651	668651	668651	669897	669897	669897
22	SET OF WIRES (NOT SHOWN)	M0072201R	M0072202R	M0072202R	M0072201R	M0072202R	M0072202R
23	CLOSE OFF PANEL (NOT SHOWN)	294261	294261	294261	—	—	—
24	FUSE, 5 AMP (NOT SHOWN)	632269	632269	632269	632269	632269	632269
25	DECORATOR PANEL, OPTIONAL (NOT SHOWN)	919583	919583	919583	919583	919583	919583

Please specify the correct Model No., Serial No., and Part No.(s) when ordering parts from the nearest authorized dealer or service center.



Specifications & illustrations subject to change without notice or incurring obligations (07/15).
O'Fallon, MO, © Nortek Global HVAC LLC 2015. All Rights Reserved.

709208A (Replaces 7092080)