

WIRING DIAGRAM

Wall Mount B6EW (8KW/10KW)

208/240 Volt

Single Phase/60Hz


NOTES:

1. The blower motor speed tap connection may not be as shown. Refer to installation instructions provided with unit to set DIP switches for the appropriate heating and cooling speed setting for your application.

2. Disconnect all power before servicing.

3. The transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.

4. If the internal wiring is replaced, use only 105°C copper wire of the same gauge.

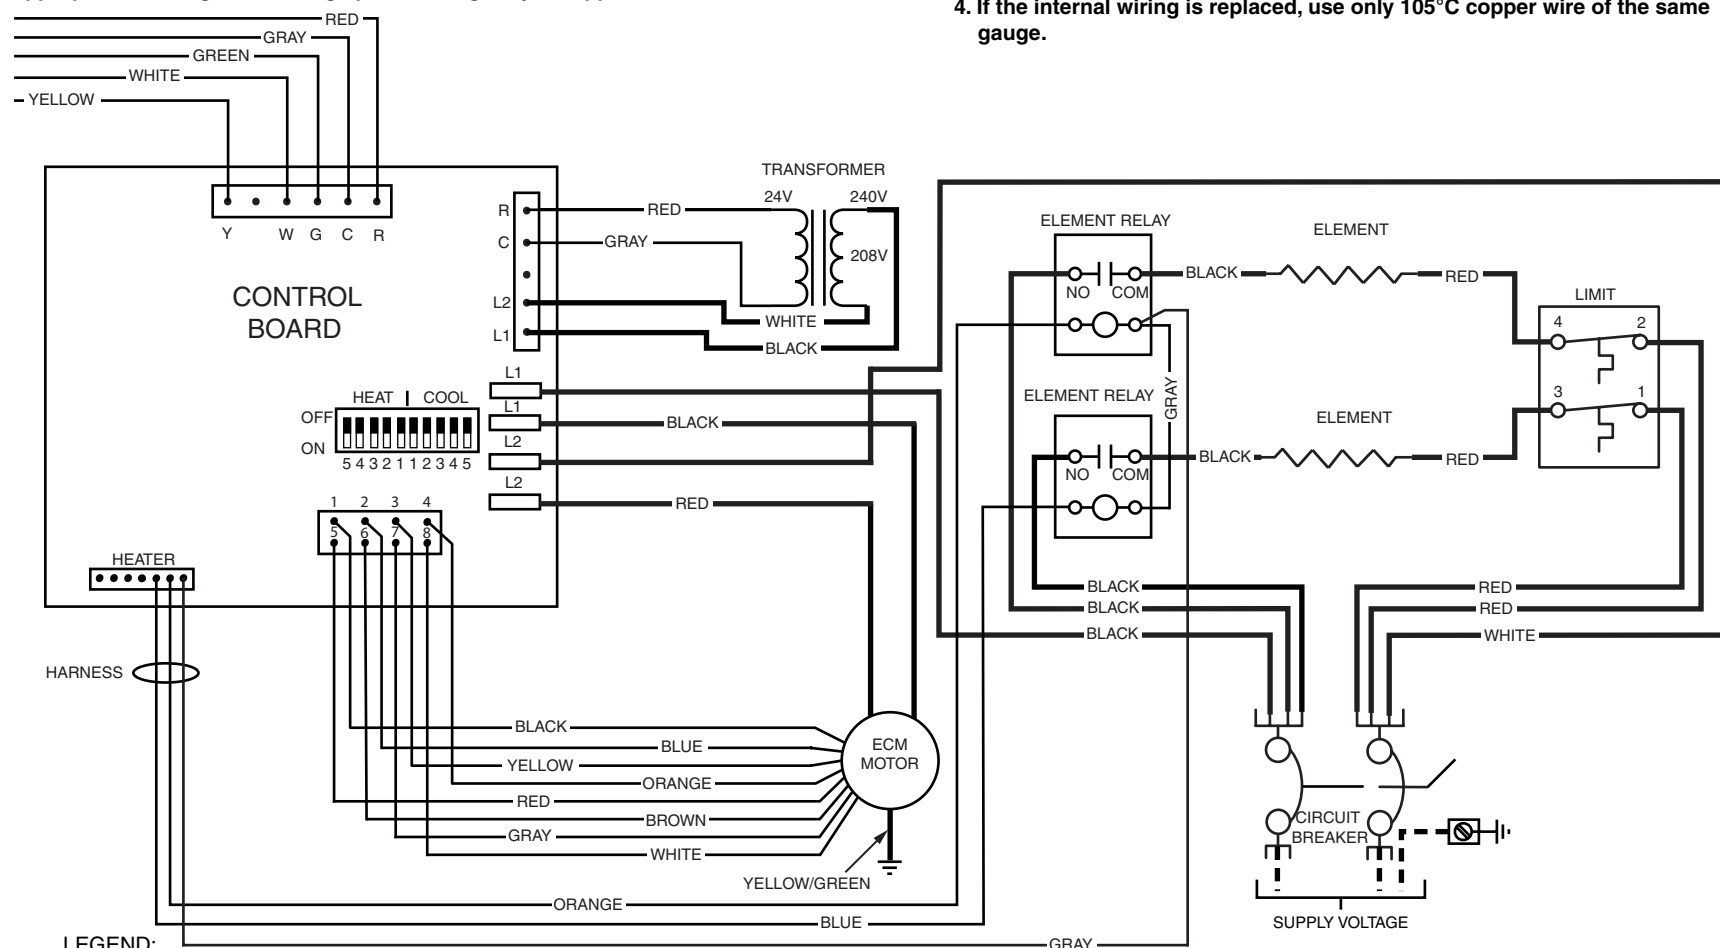

LEGEND:
 FIELD WIRING - - -
 LOW VOLTAGE ———
 HIGH VOLTAGE ———



711122A
 (Replaces 7111220)

0411