

# WIRING DIAGRAM

## B5SM Series 7.5/10T Air Handler Systems

## Electrical Configurations



Elec. Code	Freq./Phase	Voltages
J	60 Hz / 3Ø	208-230 / 460V
K	60 Hz / 1Ø	208-230

### GENERAL NOTES:

1. Disconnect all power before servicing.
2. If wiring must be replaced, use only 105°C copper wire of the same gauge.
3. For economizer application, refer to wiring instructions in economizer installation instructions for connection details.

### THREE PHASE ONLY NOTES:

1. Three phase units are factory wired for 460V/60Hz operation.
2. To reverse motor rotation, interchange any two field wired line leads.
3. To reconfigure 3Ø units for operation at 208-230V. Refer to motor wiring diagram on the motor case or the unit installation instructions.

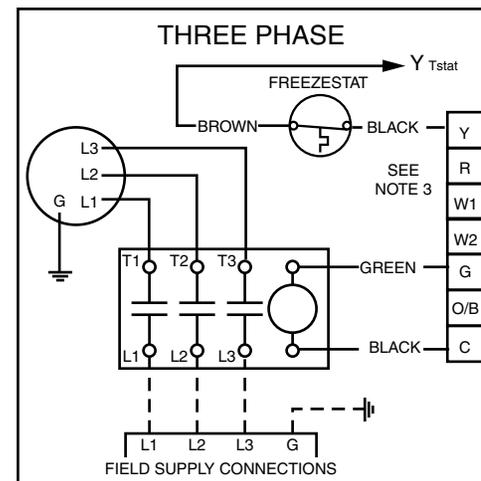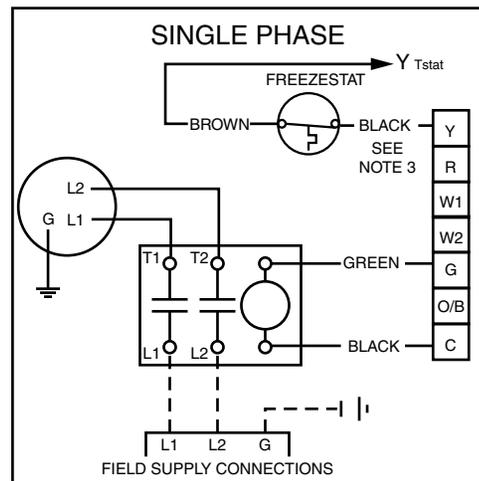

**LEGEND:**  
 FIELD WIRING - - - -  
 LOW VOLTAGE ————



7111570  
02/11