


WIRING DIAGRAM

B5SM Series 7.5/10T Air Handler Systems

GENERAL NOTES:

1. Disconnect all power before servicing.
2. If wiring must be replaced, use only 105°C copper wire of the same gauge.
3. For economizer application, refer to wiring instructions in economizer installation instructions for connection details.

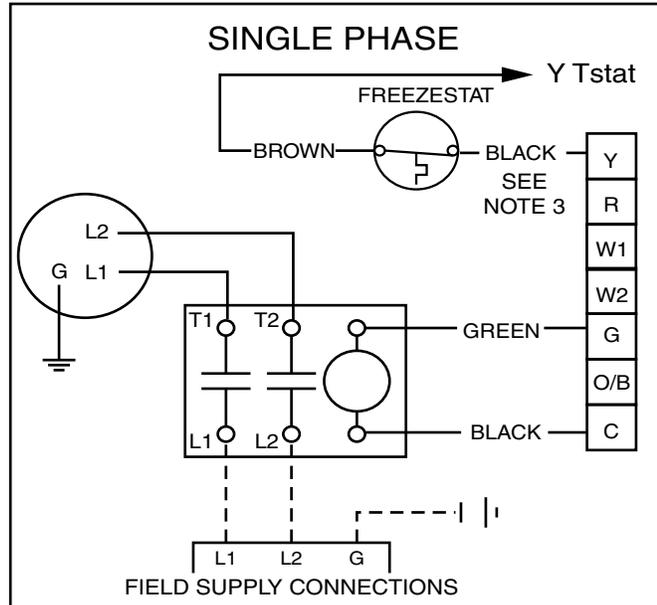


Electrical Configurations

Elec. Code	Freq./Phase	Voltages
J	60 Hz / 3Ø	208-230 / 460V
K	60 Hz / 1Ø	208-230

THREE PHASE ONLY NOTES:

1. Three phase units are factory wired for 460V/60Hz operation.
2. To reverse motor rotation, interchange any two field wired line leads.
3. To reconfigure 3Ø units for operation at 208-230V. Refer to motor wiring diagram on the motor case or the unit installation instructions.

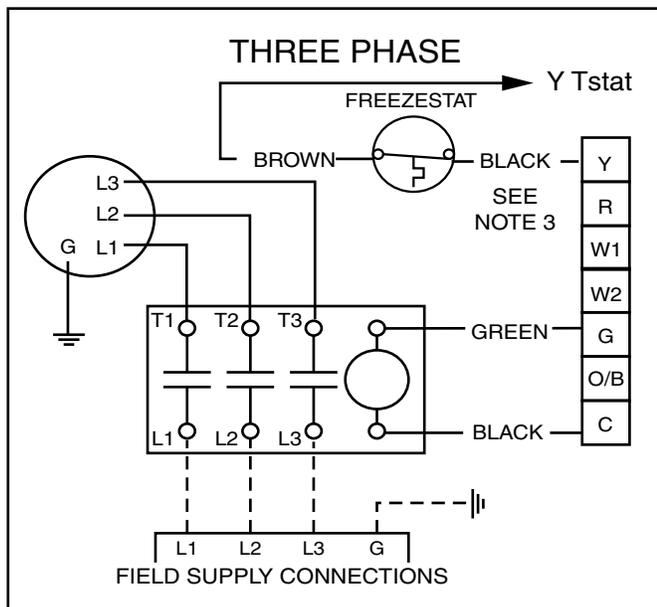

LEGEND:

FIELD WIRING	----
LOW VOLTAGE	———
HIGH VOLTAGE	————

711157A

(Replaces 7111570)

01/15

