WIRING DIAGRAM

NOTES:

- 1. If any of the original wire supplied with this unit must be replaced, it must be replaced with wiring material of the same gauge size and temperature rating.
- 2. The installation of this heater kit may require a change in the blower speed tap connection. See Installation Instructions for details.
- 3. Use copper conductors with a minimum temperature rating of 60°C for supply connections.

H8HK008H-01 (without circuit breaker) H8HK008H-11 (with circuit breaker) H8HK010H-11 (with circuit breaker) H8HK010H-01 (without circuit breaker)

