


REPLACEMENT PARTS LIST

MG2R SERIES

SINGLE STAGE CONDENSING DOWNFLOW GAS FURNACE

95% AFUE

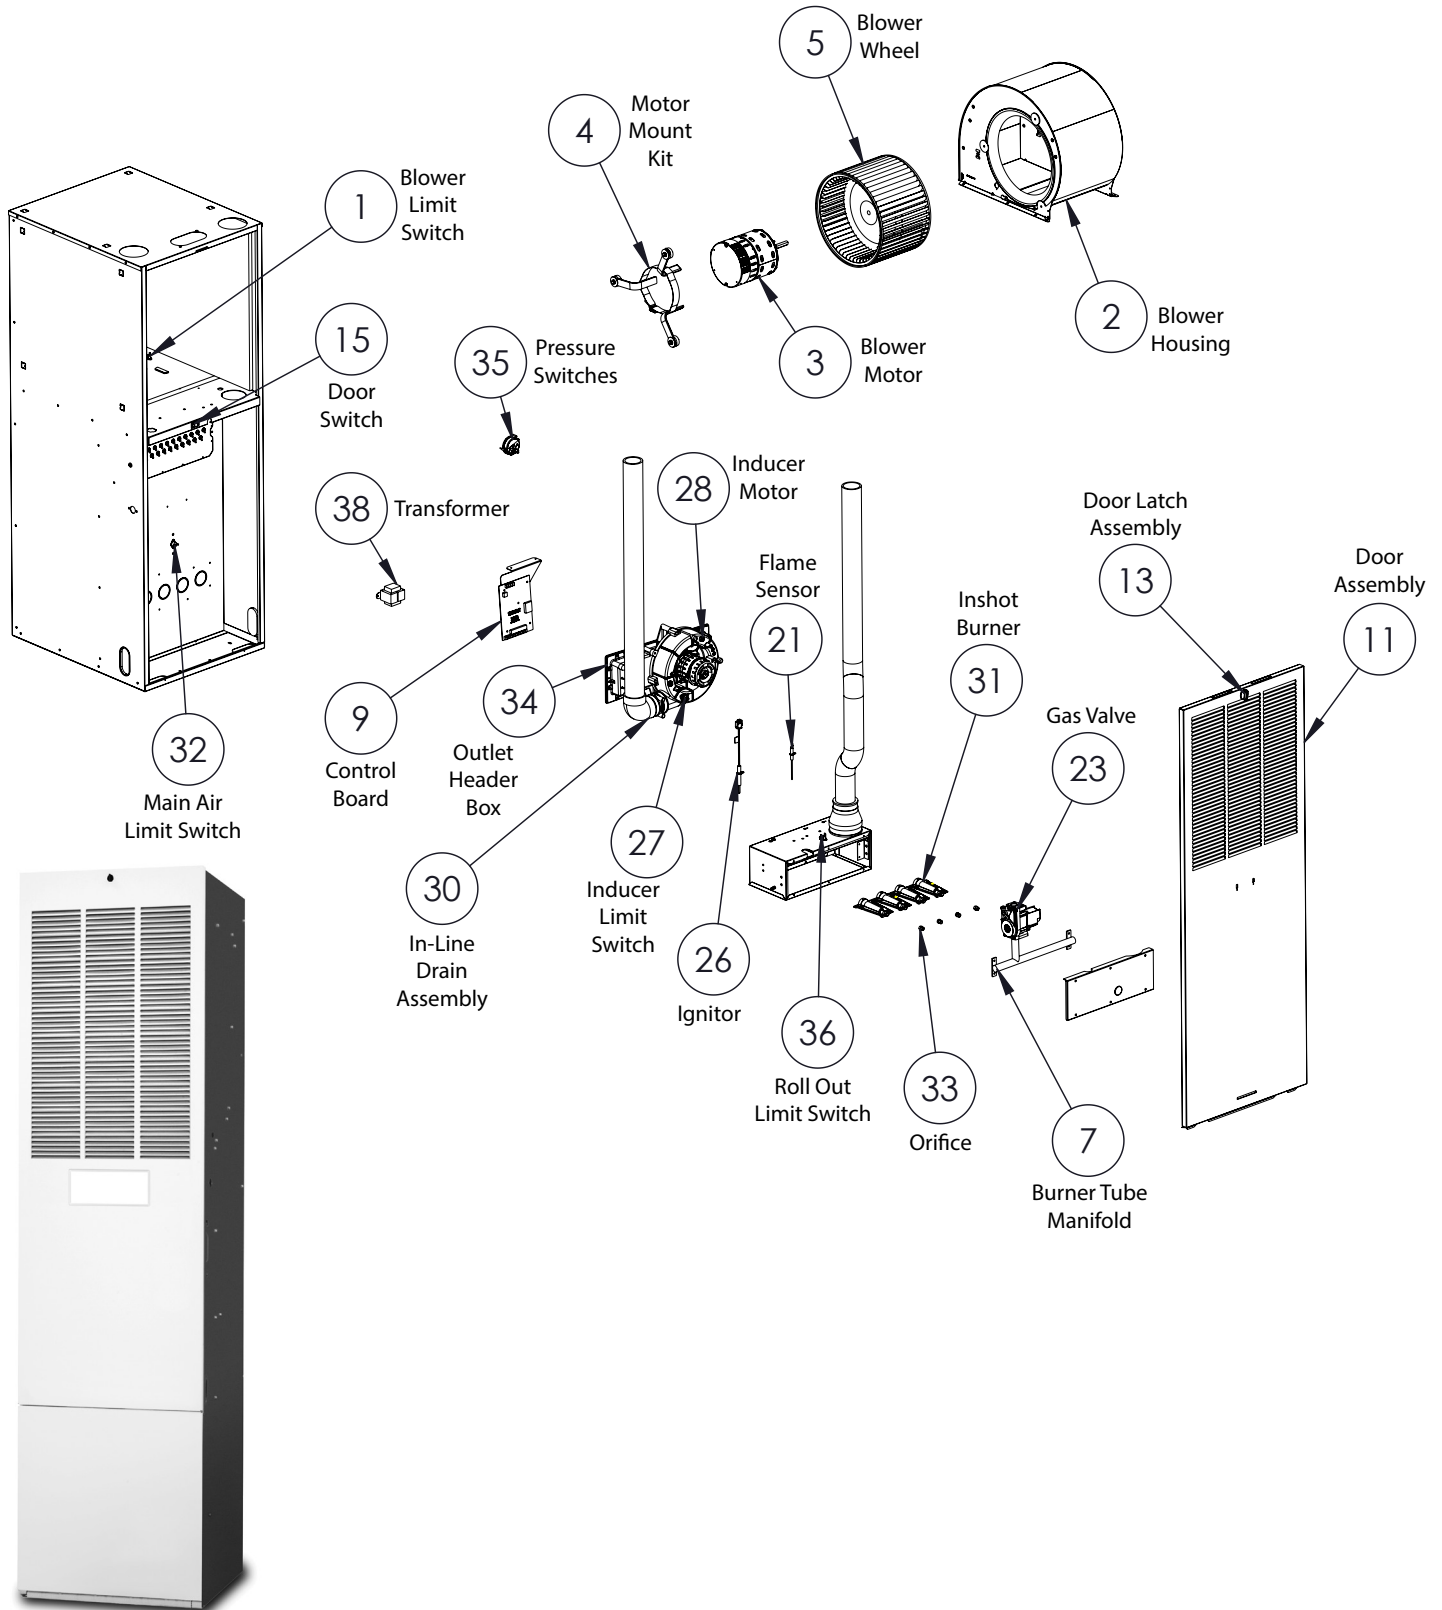

95% AFUE**MG2R SERIES GAS FURNACE**

		B045F	B045T	B060F	B060T	B072F	B072T
1	Blower Limit Switch	626602R	626602R	626602R	626602R	626602R	626602R
2	Blower Housing	297217R	297217R	297217R	297217R	297217R	297217R
3	Blower Motor	104856008R	104856005R	104856009R	104856006R	104856010R	104856007
4	Blower Motor Mount Kit	904951	904951	904951	904951	904951	904951
5	Blower Wheel	667258R	667258R	667258R	667258R	667258R	667258R
6	Burner Box Assembly (Not Shown)	921495	921495	921599	921599	921496	921496
7	Burner Tube Manifold	664639R	664639R	664639R	664639R	664640R	664640R
8	Burner View Port (Not Shown)	632216R	632216R	632216R	632216R	632216R	632216R
9	Control Board	1041648R	1041648R	1041648R	1041648R	1041648R	1041648R
10	Coil Door Assembly (Not Shown)*	104855701R	104855701R	104855701R	104855701R	104855701R	104855701R
11	Door Assembly	104855801R	104855802R	104855801R	104855802R	104855801R	104855802R
	Door Assembly*	104855803R	104855804R	104855803R	104855804R	104855803R	104855804R
12	Door Latch (Coil Door) (Not Shown)	668420R	668420R	668420R	668420R	668420R	668420R
13	Door Latch Assembly (Furnace Door)	1036349R	1036349R	1036349R	1036349R	1036349R	1036349R
14	Door Strike (Coil Door) (Not Shown)	1018719	1018719	1018719	1018719	1018719	1018719
15	Door Switch	632337R	632337R	632337R	632337R	632337R	632337R
16	Drain Tee (1/2 x 1/2 x 1/2) (Not Shown)	618060R	618060R	618060R	618060R	618060R	618060R
17	Drain Tube (Hard, "J") (Not Shown)	663706R	663706R	663706R	663706R	663706R	663706R
18	Drain Tube (Soft, "J" 42") (Not Shown)	664278R	664278R	664278R	664278R	664278R	664278R
19	Filter (Not Shown)	669363R	669779R	669363R	669779R	669363R	669779R
20	Filter Retainer Wire (Not Shown)	669065R	669955	669065R	669955	669065R	669955
21	Flame Sensor	903600	903600	903600	903600	903600	903600
22	Fuse (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
23	Gas Valve	1046626	1046626	1046626	1046626	1046626	1046626
24	Heat Exchanger (Not Shown)	921597	921597	921597	921597	921598	921598
25	Heat Exchanger (Not Shown)*	104391603R	104391603R	104391603R	104391603R	104391604R	104391604R
26	Ignitor	1046527S	1046527S	1046527S	1046527S	1046527S	1046527S
27	Inducer Limit Switch	626599R	626599R	626599R	626599R	626599R	626599R
28	Inducer Motor (with Gasket)	921494		921494		921494	
29	Inducer Orifice (Not Shown)	669927R	669927R	669749R	669749R	669712R	669712R
30	Inline Drain Assembly	664435R	664435R	664435R	664435R	664435R	664435R
31	Inshot Burner	661135R	661135R	661135R	661135R	661135R	661135R
32	Main Air Limit Switch	626615R	626615R	626617R	626617R	626598R	626598R
	Main Air Limit Switch*	1018472R	1018472R	1018472R	1018472R	626598R	626598R
33	Orifice (Natural Gas)	661049R	661049R	661045R	661045R	661047R	661047R
	Orifice (LP Gas)	661057R	661057R	661055R	661055R	661056R	661056R
34	Outlet Header Box	904802	904802	904802	904802	904802	904802
35	Pressure Switch	632492R	632492R	632624R	632624R	632492R	632492R
36	Roll-Out Limit Switch	626608R	626608R	626608R	626608R	626608R	626608R
37	Set of Wires (Not Shown)	1040685R	1040685R	1040685R	1040685R	1040685R	1040685R
38	Transformer	622341R	622341R	622341R	622341R	622341R	622341R

* Items used only on ACM1 models

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

